



B = minimum space necessary for removing the housing without unscrewing the sheath. This design allows rapid replacement of the monitoring equipment without the need for emptying installations or tanks.